 



1. Deleting all settings (reset)

There are **2 methods** of resetting the Climber motor to the factory settings:

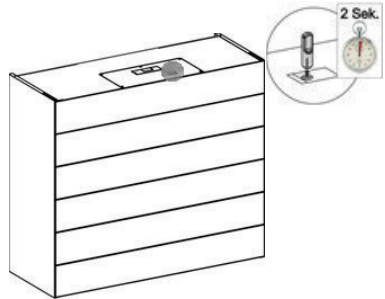

Method 1: hold the supplied magnets over the red point on the motor (reed contact) for 2 seconds.

 The drive acknowledges the deleting process by briefly starting up the curtain. The motor is now ready for teaching (**continue with Point 2**).

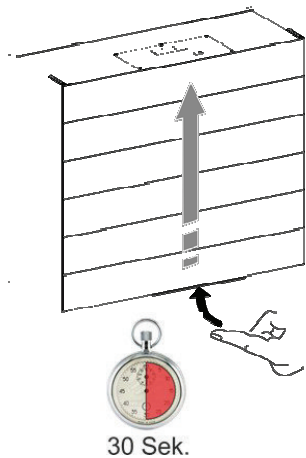


Method 2: While the curtain is moving upwards, operate the sensor once again and keep your finger on the sensor for 30 seconds without removing it.

The drive acknowledges the deleting process by briefly starting up the curtain. You can now remove your finger from the sensor. The motor is now ready for teaching (**continue with Point 2**).


2. Teaching the motor

 2.1 Teaching top end point.

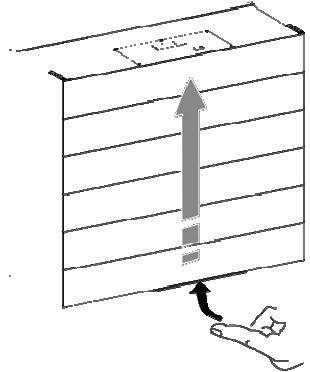

To teach the top end point, you must operate the sensor again and hold it. The curtain will then run up to the end point at low speed. The curtain then runs downwards for a short distance once the end point has been reached. The top end point is now confirmed.

 
2.2 Teaching bottom end point.

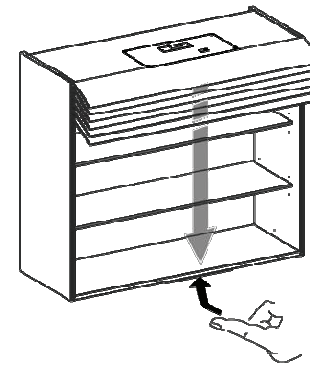

To teach the bottom end point, you must operate the sensor again and hold it. In this case, the curtain runs automatically downwards until it reaches the bottom end point. The curtain opens briefly, and the bottom end point is now confirmed.


2. Teaching the motor

 2.3 Teaching the motor tractive force.

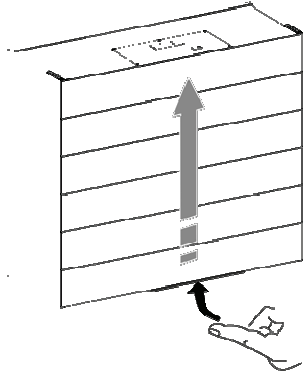

The last thing to do is to teach the motor tractive force. First you have to actuate the sensor and hold it until the curtain has opened completely. This time, the curtain remains in the completely opened condition.

 The motor is now taught!

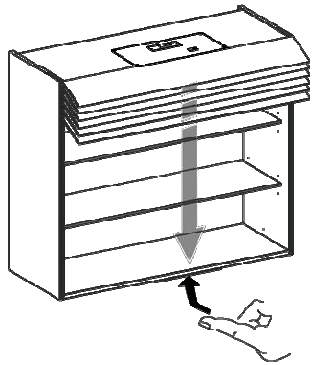

You can now completely close the curtain by touching the sensor briefly.